

Ubung4th_Serial

```
int beTested = 33;

void setup() {
  // put your setup code here, to run once:
  Serial.begin(9600);
}

void loop() {
  // put your main code here, to run repeatedly:
  Serial.println("Let's begin");
  Serial.print(beTested);
  Serial.write(beTested);
  Serial.println();
  delay(1000);
}
```

Let's begin
33!
Let's begin
33!
Let's begin
33!
Let's begin
33!
Let's begin
33!
Let's begin
33!

☒ Autoscroll