


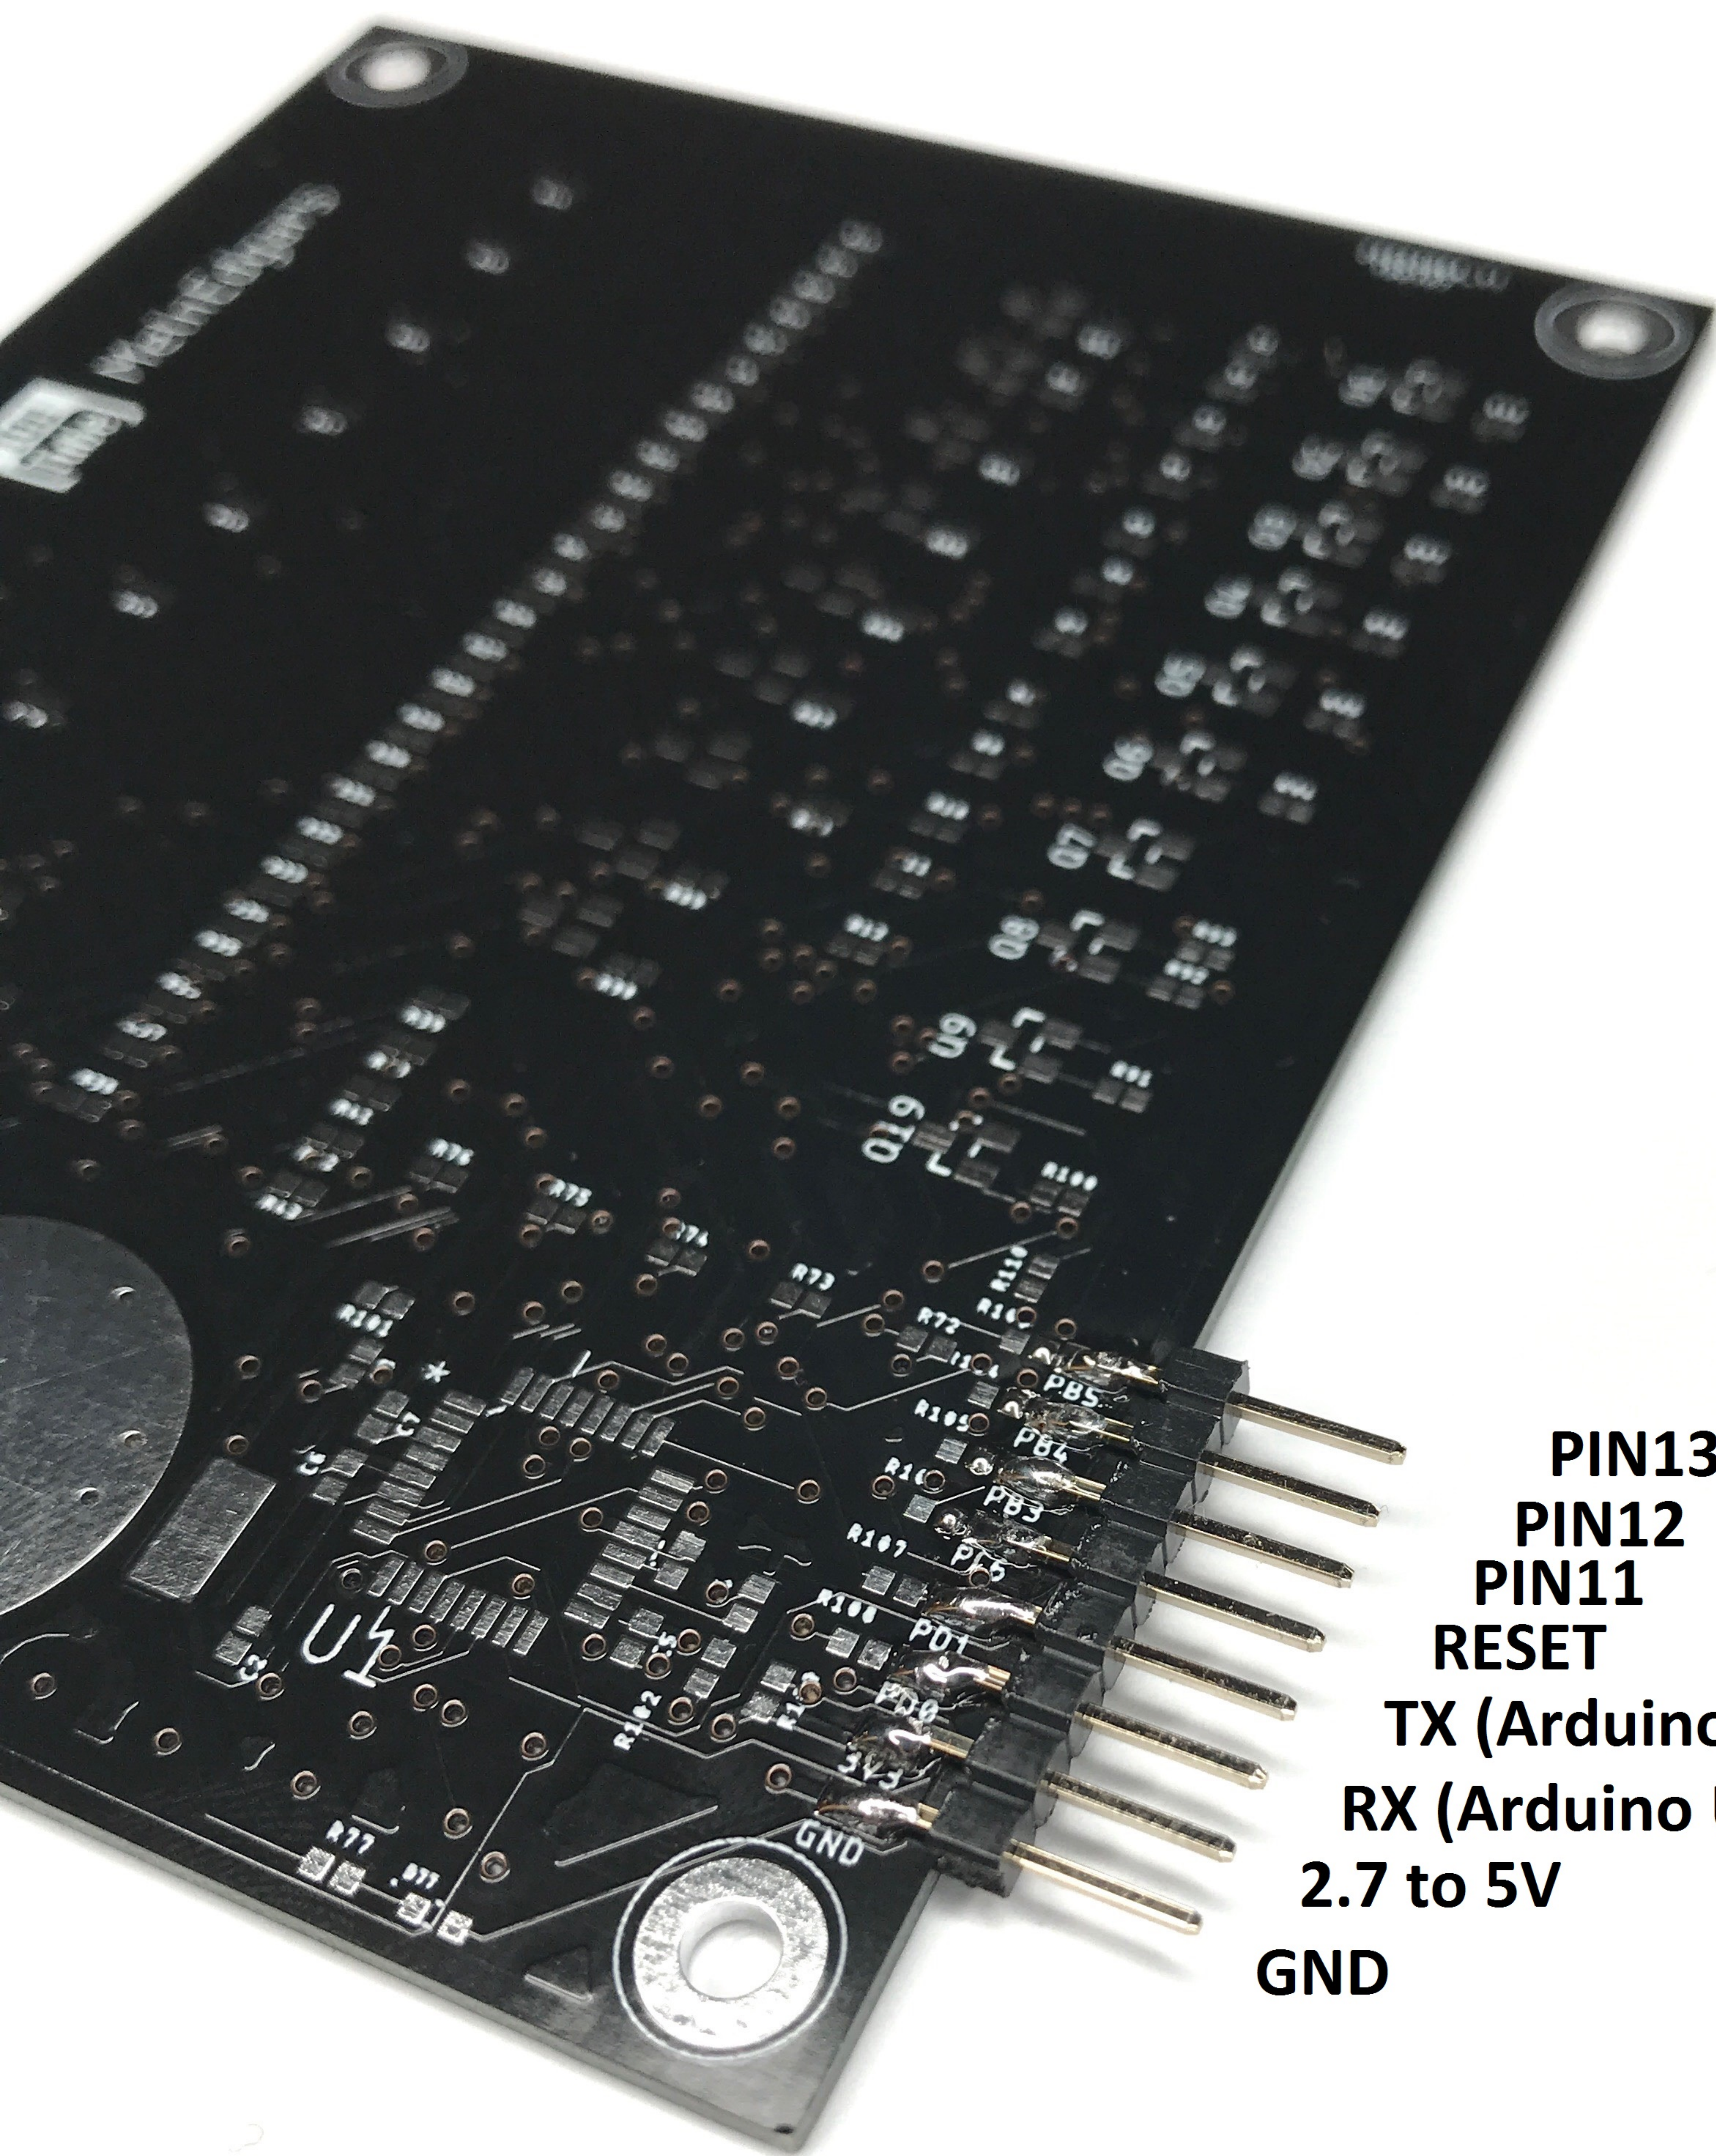

PIN13
PIN12
PIN11
RESET
TX (Arduino UNO pin1)
RX (Arduino UNO pin 0)
2.7 to 5V
GND

***NOTE: connect PC6(RESET) to Arduino pin 10 when burning bootloader**