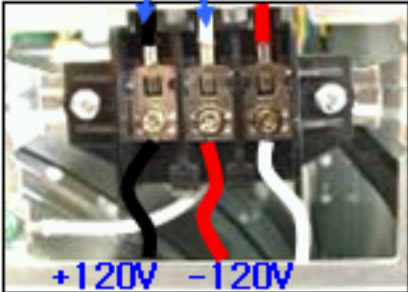
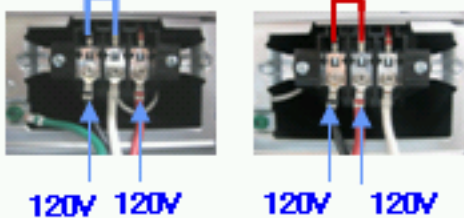
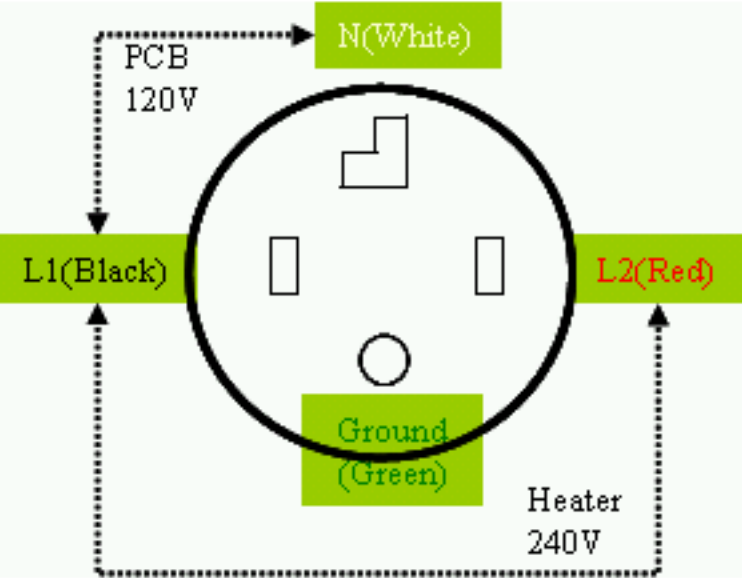


Dryer: nP & PS Error code

Error Code	Description	Problem	Model	Solution
PS	Power cord improperly connected.	When 240V is supplied to main PCB, LED displays "PS" and then unit powers off to protect Main PCB.	All Electric Dryer	Please check Terminal block of dryer. Switched white(N) and red(L2) wire connection. Most of return PCB was damaged because of power cord mis-connection.
		power supplies 240V with PCB 		normal_120V Misconnection 240V 
nP	L2 Power is not supplied to the heater.	No current is detected at heater. -. Motor working but No heat	Steam Electric Dryer	Power is not supplied to Heater. Please check voltage of wall outlet.
				► Normal case -. L1~N : 120V -. L2~N : 120V -. L1~L2 : 240V ► wrong case 1 -. L1~N : 120V -. L2~N : 120V -. L1~L2 : 0V ► wrong case 2 -. L1~N : 120V -. L2~N : 0V -. L1~L2 : 120V □ Abnormal : Voltage of "L1~L2" is less than 200V