

3. Exporting the Data to Shapefiles

- ▶ Select the correct units for the exported shapefile(s). Generally this is Meters, Sq. meters, and Meters Per Second. You may select these yourself or use the default Current Display Units if they are correct.
- ▶ Select the desired number of decimal places for your units
- ▶ Units affect shapefile attributes: Length, Area, Perimeter

