



Remove your old doorbell

Unscrew and remove your old doorbell from the doorframe. Disconnect any wires attached to your doorbell and remove any additional hardware.

Continue