



No.	Description	No.	Description
1	Manifold Air Temperature Sensor	12	ECU Engine Connector
2	Fuel Injection Harness Connection	13	Can Terminator Connector
3	Alternator Excitation	14	Remote On/Off Connector
4	29 Amp ECU Fuse	15	Rail Pressure Sensor
5	30 Amp System Fuse	16	PCV/SCV Suction Control Valve
6	TVP (Transient Voltage Protection)	17	Oil Pressure Sensor
7	Water in Fuel Sensor	20	Fuel Temperature Sensor
10	Coolant Temperature Sensor	21	Engine Cam Sensor
11	ECU Connector	22	Engine Crank Sensor