

temperature sensor error.	[1405]	E03	cartridge may be defective. Replace the ink cartridge.
Non-supported ink cartridge is installed.	[1485]	E05	A non-supported ink cartridge is installed. Install the supported ink cartridge. If the error is not cleared, the ink cartridge may be defective. Replace the ink cartridge.
Ink cartridge in a wrong position.	[1486]	E07	Install the ink cartridge in the correct position. If the error is not cleared, the ink cartridge may be defective. Replace the ink cartridge.
Multiple ink cartridges of the same color installed.	[1487]	E07	Confirm that each ink cartridge is installed in the correct position. If the error is not cleared, the ink cartridge may be defective. Replace the ink cartridge.
Ink cartridge hardware error	[1682]	E15	Re-set the ink cartridge. If the error is not cleared, the ink cartridge may be defective. Replace the ink cartridge.
Ink cartridge not recognized.	[1684]	E14	A non-supported ink cartridge is installed. Install the supported ink cartridge.
The remaining ink amount unknown.	[1686]	E13	Replace the ink cartridge. Printing with an empty ink tank can damage the machine. To continue printing without replacing the ink cartridge, press the Stop/Reset button for 5 sec. or longer. (After the operation, it is recorded in the machine EEPROM that the function is set to the error state.)