



Select the device you want to unplug or eject, and then click Stop. When Windows notifies you that it is safe to do so unplug the device from your computer.

Hardware devices:



General USB Flash Disk USB Device

General USB Flash Disk USB Device on USB Mass Storage Device

Properties

Stop

☐ Display device components

Close