

# Operation Guide 3420

CASIO

## About This Manual



- Depending on the model of your watch, display text appears either as dark figures on a light background or light figures on a dark background. All sample displays in this manual are shown using dark figures on a light background.
- Button operations are indicated using the letters shown in the illustration.
- Each section of this manual provides you with the information you need to perform operations in each mode. Further details and technical information can be found in the "Reference" section.

E-1

## Contents

|                 |      |
|-----------------|------|
| General Guide   | E-4  |
| Timekeeping     | E-6  |
| World Time      | E-11 |
| Stopwatch       | E-13 |
| Countdown Timer | E-16 |
| Alarms          | E-22 |
| Illumination    | E-29 |
| Reference       | E-33 |
| Specifications  | E-42 |

E-1

## Procedure Lookup

The following is a handy reference list of all the operational procedures contained in this manual.

|                                                                           |      |
|---------------------------------------------------------------------------|------|
| To set the time and date                                                  | E-7  |
| To toggle the Timekeeping Mode time between DST and Standard Time         | E-9  |
| To toggle between 12-hour and 24-hour timekeeping                         | E-10 |
| To view the time for another city code                                    | E-11 |
| To toggle a city code time between Standard Time and Daylight Saving Time | E-12 |
| To measure times with the stopwatch                                       | E-14 |
| To use Auto-Start                                                         | E-15 |
| To configure the countdown timer                                          | E-19 |
| To use the countdown timer                                                | E-21 |
| To set an alarm time                                                      | E-24 |
| To test the alarm                                                         | E-26 |


E-2

|                                                   |      |
|---------------------------------------------------|------|
| To turn an alarm on and off                       | E-27 |
| To turn the Hourly Time Signal on and off         | E-28 |
| To illuminate the display manually                | E-29 |
| To specify the illumination duration              | E-30 |
| To enable and disable auto light switch operation | E-32 |
| To turn Flash Alert on and off                    | E-35 |
| To turn the button operation tone on and off      | E-36 |

E-3

## General Guide

- Press (A) to change from mode to mode.
- In any mode (except when a setting screen is on the display), press (B) to illuminate the display.

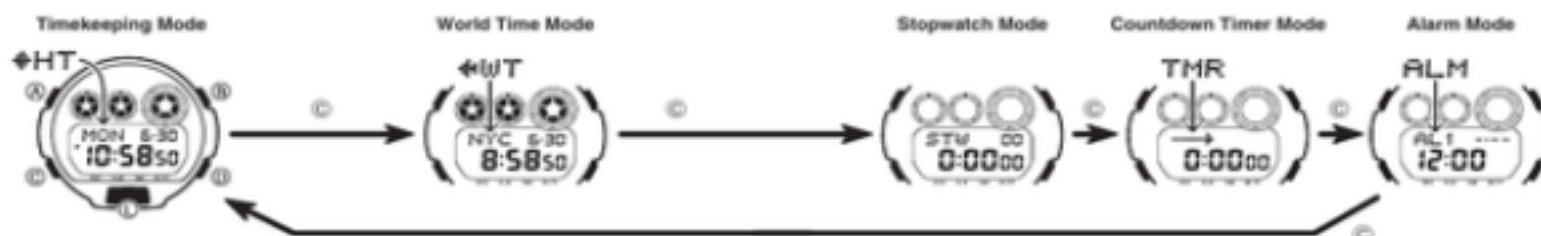

E-4

E-5

## Timekeeping

Use the Timekeeping Mode to set and view the current time and date.

**Read This Before You Set the Time and Date!**  
The times displayed in the Timekeeping Mode and World Time Mode are linked. Because of this, make sure you select a Home Time zone before you set the time and date.

E-6

### To set the time and date

- In the Timekeeping Mode, hold down (A) until the seconds start to flash, which indicates the setting screen.
- Press (C) to move the flashing in the sequence shown below to select other settings.



E-7

- When the setting you want to change is flashing, use (D) and (B) to change it as described below.

| Screen | To do this:                                                        | Do this:                               |
|--------|--------------------------------------------------------------------|----------------------------------------|
| 50     | Reset the seconds to 00                                            | Press (D).                             |
| OF F   | Toggle between Daylight Saving Time (DST) and Standard Time (OF F) | Press (D).                             |
| + 90   | Specify your Home Time zone                                        | Use (D) (eastward) and (B) (westward). |
| 10:58  | Change the hour or minutes                                         | Use (D) (+) and (B) (-).               |
| 20 14  | Change the year                                                    |                                        |
| 6:30   | Change the month or day                                            |                                        |

- For details about time zones, see the "City Code Table" at the back of this manual.
- See "Daylight Saving Time (DST)" on page E-9 for details about the DST setting.
- For information about Flash Alert, see "Flash Alert" (page E-35).

E-8

- Press (A) to exit the setting screen.
- The day of the week is displayed automatically in accordance with the date (year, month, and day) settings.

### Daylight Saving Time (DST)

Daylight Saving Time (summer time) advances the time setting by one hour from Standard Time. Remember that not all countries or even local areas use Daylight Saving Time.

#### To toggle the Timekeeping Mode time between DST and Standard Time

- In the Timekeeping Mode, hold down (A) until the seconds start to flash, which indicates the setting screen.
- Press (C) to display the DST setting screen.
- Press (D) to toggle between Daylight Saving Time (DST displayed) and Standard Time (OF F displayed).
- Press (A) to exit the setting screen.
- The DST indicator appears on the display to indicate that Daylight Saving Time is turned on.



E-9